

Mondejar, Honeylee M.
BSIT-4R2

User-end Instruction of Epson L120 Series Printer

Epson L120 Series Printer

It is a single function inkjet printer that has a built-in tank system. It is using a refillable ink tanks which allow the user to refill ink. It is compatible with T664, C664 types of ink. It can print A4, letter, legal, A3, A3+, A2, B3 and B4. It can print different types of paper as long as it fits within the specified type.

To install Epson L120 series Printer Software using CD Installation:

1. Insert the CD into your computer's CD/DVD drive.
2. The CD will automatically launch the installation wizard. If doesn't browse the CD content and locate the setup or installation file.
3. Double click the setup file to begin the installation.
4. The installation will guide the installation steps.
5. Select languages, click agree to the terms and choose installation preferences.
6. When installation wizard prompt, connect the printer to your computer using the provided USB cable.
7. Make sure that the printer is powered on.
8. The installation will include installing drivers and software for the Epson L120 Printer.
9. Wait until the installation to complete.
10. If the installation is finish, the wizard prompt a test page.
11. If the installation is finish, restart your computer.

To install Epson L120 Series without CD:

1. Go to the official website of Epson.
2. Select Operating System, click go then software and driver then click download.
3. Open the downloaded file by double clicking to start the installation.
4. Follow the installation steps.
5. Agree to any terms of conditions if you agree and cancel if not.
6. When installation wizard will be prompted, connect the printer to your computer using the USB cable.
7. Make sure that the printer is powered on.
8. The installation will include installing drivers and software for Epson L120 Series printer.
9. Wait the installation to complete.
10. If the installation is finished, the wizard prompts a test page.
11. Test a print, if done and it's okay restart your computer.

To set up printer:

1. Plug the Epson L120 printer, it should be connected to the USB port found in the back.
2. Connect laptop to printer. In the back part of the printer, you'll find the AC inlet.
3. Set up paper support.
4. Turn on the printer by pressing the power button.

To print:

1. Load the paper in the paper holder.
2. Set up the edge guide that fits the bondpaper. It will hold the bond paper not to cause paper jam or any problem.
3. In your PC, click Ctrl + P then the print page interface will show up. Set the paper size, margin, color and etc.
4. Then click print.

To refill inks:

1. Check the level of ink. In the ink tanks, there are levels for ink for you to identify the level of ink.
2. Refill the ink, make sure to refill based on the color of tanks. Use compatible ink for printers to avoid problems.
3. Make sure that the ink is within 6 months upon opening.

Maintenance Checklist For EPSON L120 Series Printer

- Check if the wire are not damage.
- Check the inside part of the printer, especially the belt, small wire etc., There are unexpected problem that cause damage to the printer.
- Check the level of ink.
- Use printer once a week
- Perform ~~no~~ nozzle check and clean if there are gaps or lines in the print out.
- Perform print head alignment to check if there is misalignment or inconsistencies in print quality.
- Perform Head cleaning.
- Perform "Paper guide Cleaning" to check if there no dust inside.
- Check software updates.